



F100 Quick Reference Sheet

(Adapted from *Thom Hogan's Complete Guide to the Nikon F100*)

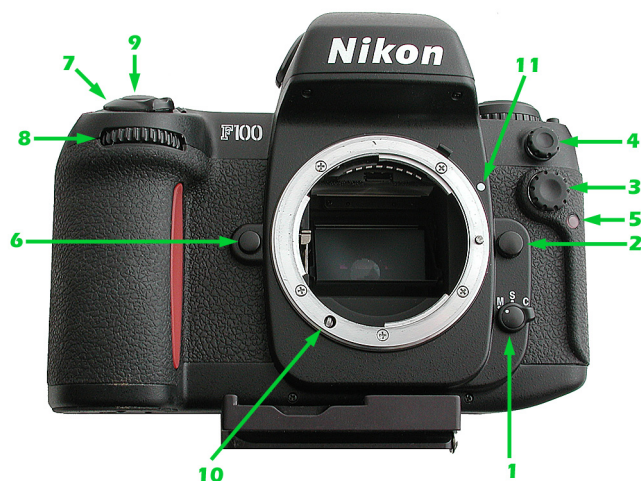


F100 Front View

1. Focus Mode selector
2. Lens Release button
3. 10-pin Remote Release terminal
4. Standard PC Sync socket (for studio flash)
5. Self-timer lamp
6. Depth of Field Preview button
7. Power Switch (around the shutter release)
8. Front Command Dial
9. Shutter Release
10. Autofocus Motor shaft
11. Lens Alignment indicator

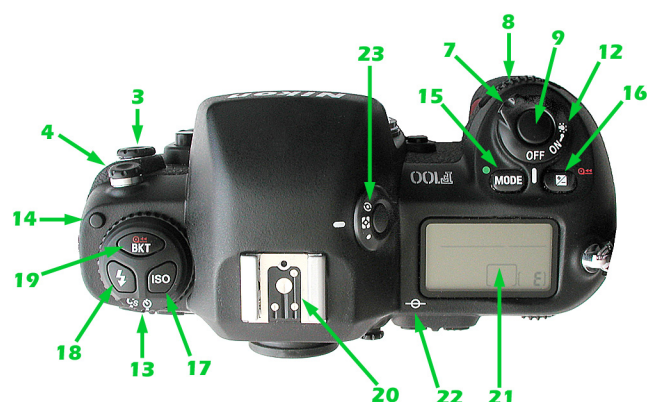


F100 Top View

12. LCD Illumination Position (on Power Switch)
13. Film Advance selector (Single, Continuous, Continuous Silent, Multiple Exposure, Self Timer)
14. Film Advance selector release button
15. Exposure Mode button
16. Exposure Compensation button
17. ISO Sensitivity button
18. Flash Mode button
19. Bracketing button
20. Hot shoe
21. Top LCD command display panel
22. Film plane indicator
23. Metering Method selector (release button inside ring)

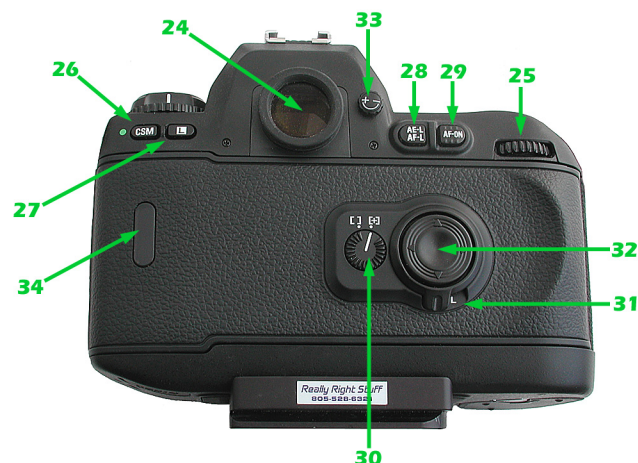


F100 Back View

24. Viewfinder eyepiece
25. Rear Command Dial
26. Custom Settings button
27. Lock button
28. AE-L/AF-L button
29. Autofocus On button
30. Autofocus area mode selector
31. Autofocus area lock (around autofocus direction pad)
32. Autofocus area direction pad
33. Viewfinder Diopter adjustment
34. Film Confirmation window

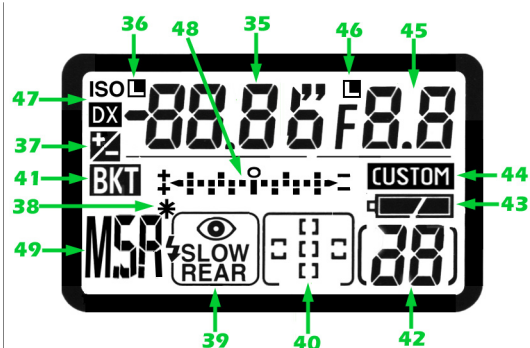

Top LCD [21]

- 35. Shutter Speed, Exposure Compensation value
- 36. Shutter Speed Lock indicator
- 37. Exposure Compensation indicator
- 38. Program override indicator
- 39. Flash Mode indicators
- 40. Focus Area indicator
- 41. Exposure Bracketing indicator
- 42. Frame Counter value
- 43. Battery Status
- 44. Custom Settings (active) indicator
- 45. Aperture value
- 46. Aperture Lock indicator
- 47. ISO and DX film indicators
- 48. Analog Exposure display, Exposure Compensation value
- 49. Exposure Mode indicator (P, S, A, or M)

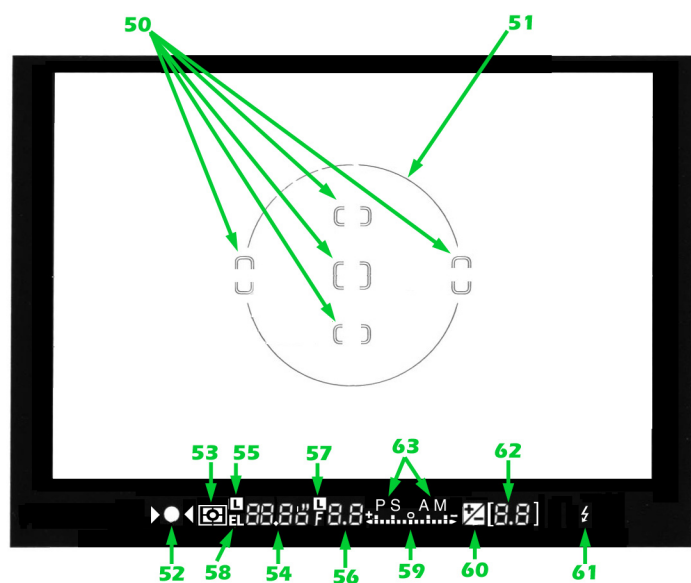

Viewfinder Display

- 50. Focus Areas
- 51. Center-weighted metering area indicator
- 52. Focus Confirmation indicators
- 53. Metering Method indicator
- 54. Shutter Speed value
- 55. Shutter Speed lock indicator
- 56. Aperture value
- 57. Aperture lock indicator
- 58. Exposure Lock indicator
- 59. Manual Exposure display
- 60. Exposure (and Flash) Compensation indicator
- 61. Flash Ready lamp
- 62. Frame Counter (also Exposure Compensation Value)
- 63. Exposure mode indicators

This quick reference sheet is adapted from *Thom Hogan's Complete Guide to the Nikon F100* and is intended only for purchasers of the book. Copying and distributing this document is expressly forbidden.